



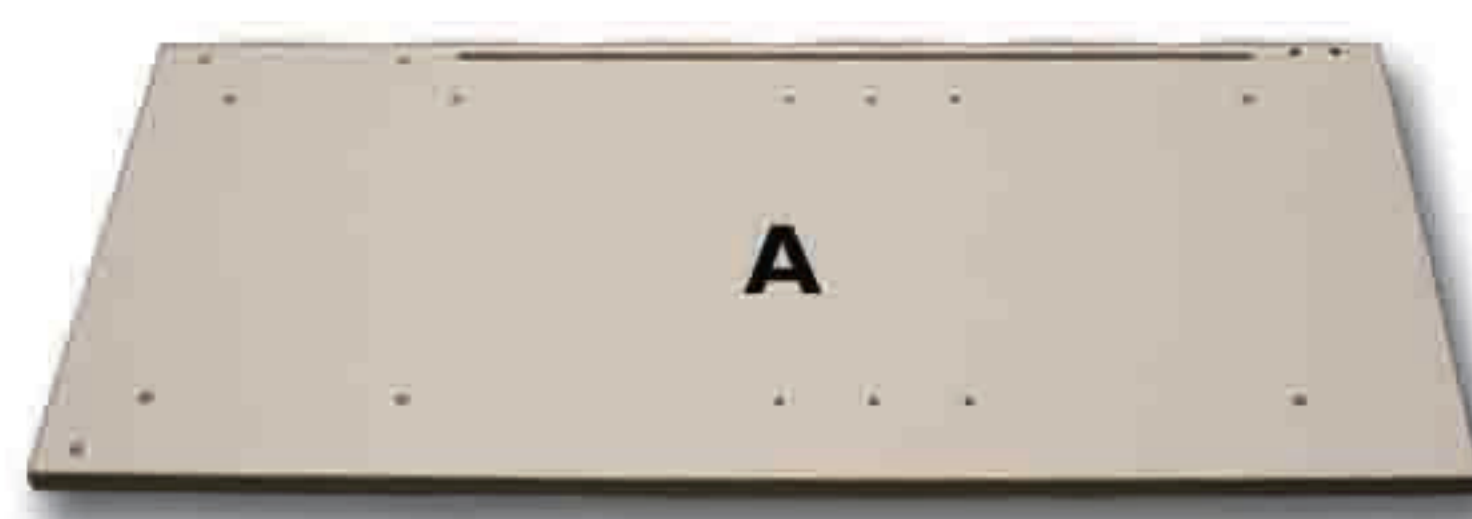


LEFT SIDE PANEL (x1)



RIGHT SIDE PANEL (x1)

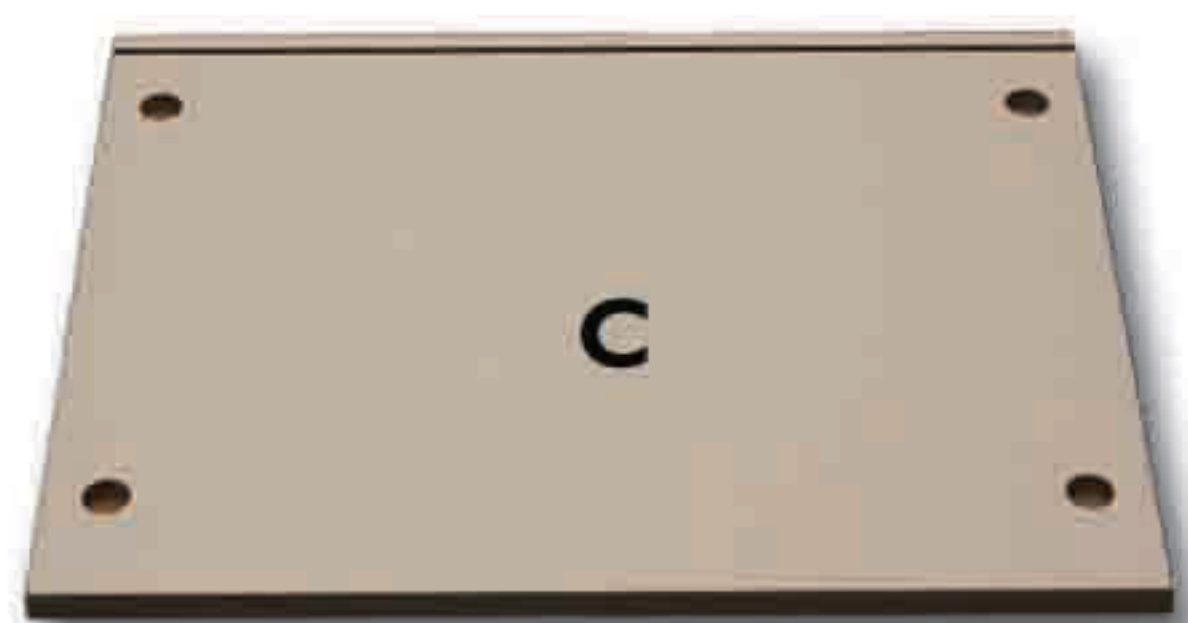

COUNTER TOP PANEL (x1)

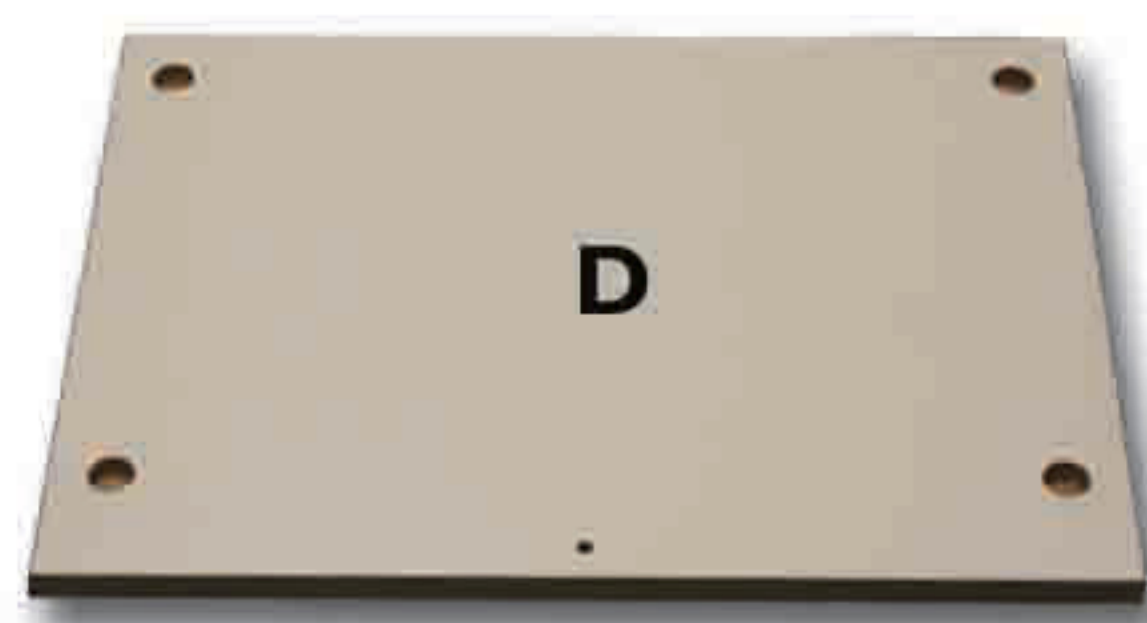

COUNTER BOTTOM PANEL (x1)



BOTTOM PANEL (x1)



TOP FRONT PANEL (x1)




FRONT TOE KICK (x1)




BACK TOE KICK (x1)



DOOR (x2)

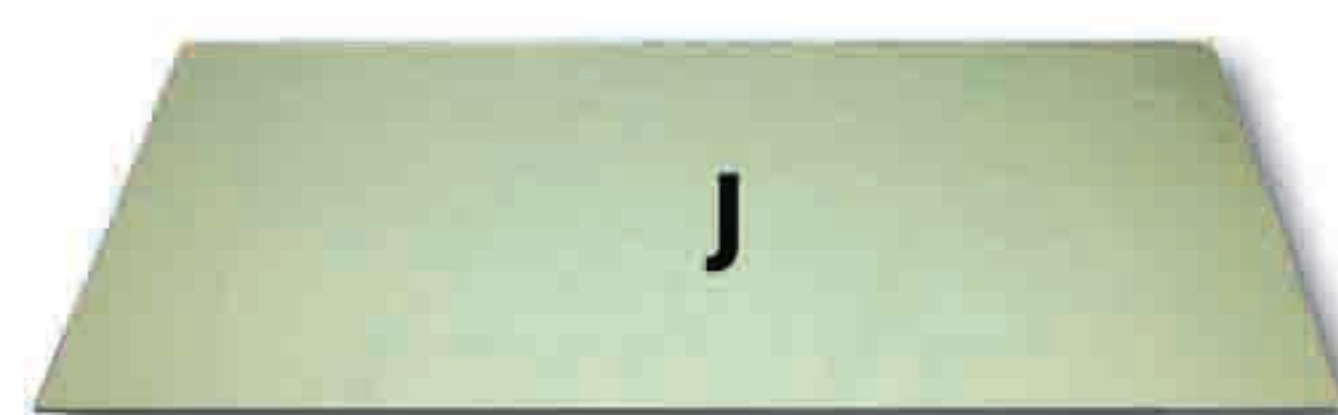

FRONT GLASS

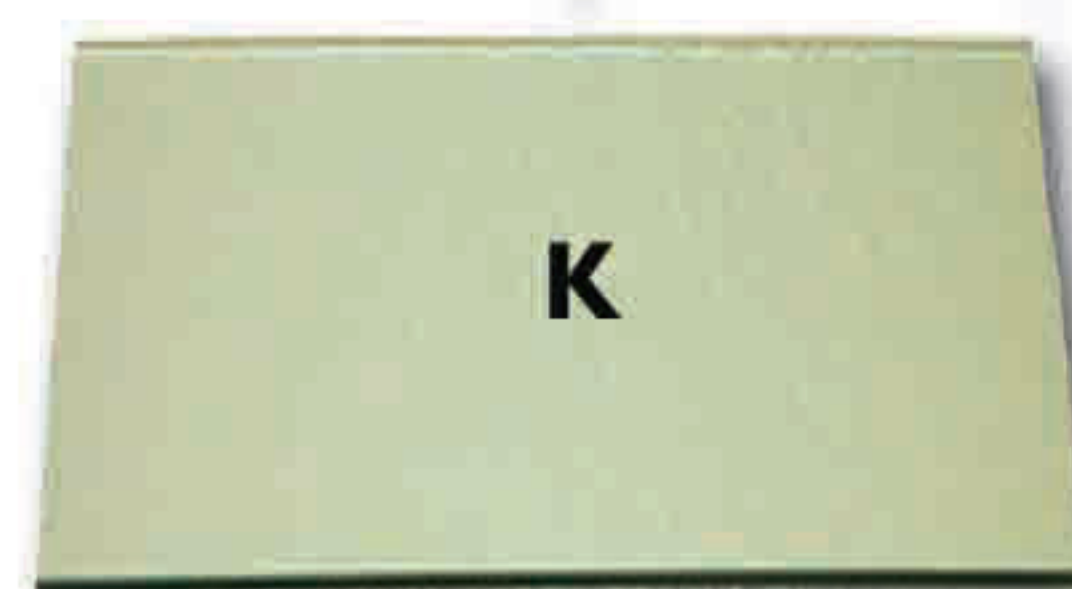

GLASS SHELF

GLASS FRONT CASH REGISTER STAND ASSEMBLY INSTRUCTIONS



DAWSON JONES
STORE FIXTURES



2960 Amwiler Rd.
Atlanta, Ga 30360
dawsonjones.com
(800) 418-1954
(770) 458-7234

TOOLS NEEDED



1.

FRONT PANEL AND TOP PANEL ASSEMBLE; REAR TOE KICK AND BOTTOM PANEL ASSEMBLE

FRONT PANEL (x1) #6x12 PAN SCREW (x2)
TOP PANEL (x1) REAR TOE KICK (x1)
DOWEL PIN (x3) BOTTOM PANEL (x1)
HW116-2 (x1)

1. Connect front panel to top panel using 2 dowel pins.
2. Connect HW116-2 to top panel using #6x12 pan screws.
3. Connect rear toe kick to bottom using dowel pin.



2.

RIGHT SIDE PANEL ASSEMBLE

RIGHT SIDE PANEL (x1) #10 CAM LOCK (x9)
FALSE BOTTOM (x1) DOWEL PIN (x2)
FRONT TOE KICK (x1)
BOLT (x9)

1. Connect top panel to right side panel using bolts and dowel pins.
2. Connect false bottom to right side panel using bolts.
3. Connect front toe kick to right side panel using bolts.
4. Connect bottom panel to right side panel using bolts.
5. Insert and tighten #10 cam lock.



3.

FRONT GLASS AND LEFT SIDE PANEL ASSEMBLE

FRONT GLASS (x1)
LEFT SIDE PANEL (x1)
#10 CAM LOCK (x9)
BOLT (x9)
DOWEL PIN (x2)
GLIDE (x4)
#10 SCREW CAP (x18)

1. Slide front glass into position.
2. Connect left side panel to counter using bolts and dowel pins.
3. Attach glides on the bottom.
4. Install #10 screw caps.



4.

DOOR ASSEMBLE

AK0313-2 (x1)
DOOR (x2)

1. Put AK0313-2 onto false bottom panel.
2. Insert doors on the counter.

